

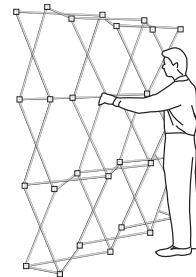
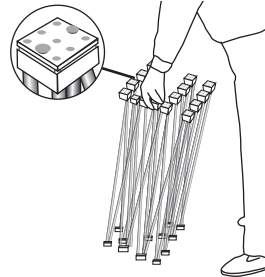
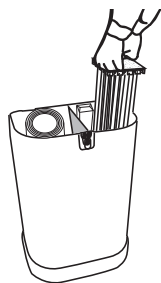


1

**Assemble Frame
with blue hookstuds at the top**

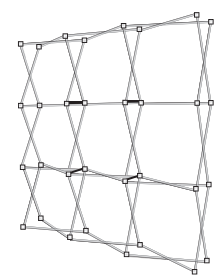



Push the locking bars
together until they
“click”

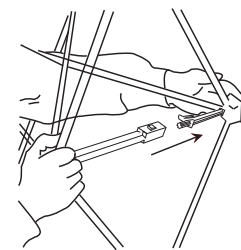

Push-fit so they “click”
into locked position.
(Twist gently to remove
later)



2

Fit Magbars

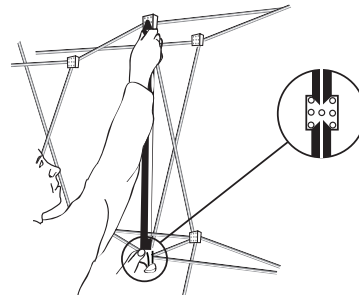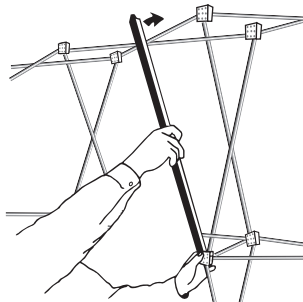

2 b


Bottom Horizontal
magbars to top holes of
the bottom hub on
straight systems and on
outside curves

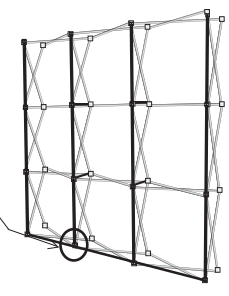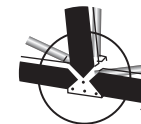


3

Panels


Panels are labeled on
reverse. Sort them out
at this point

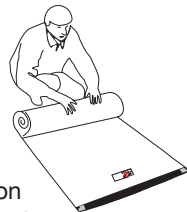

Hook on reverse of
panel locates on
the coloured stud

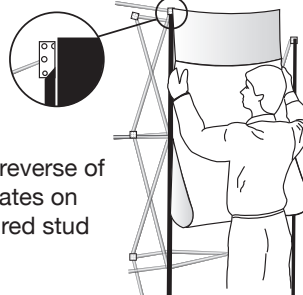

Align panel
edges down
centre of
magnetic bar

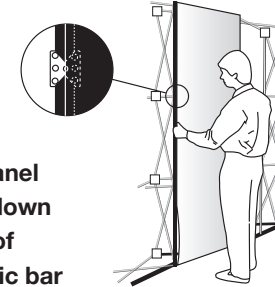


End panels curve
from front to back






4

Lights

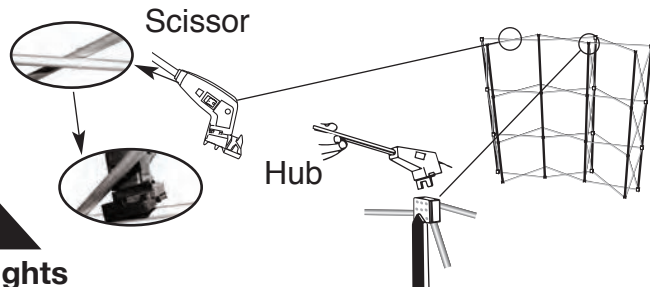

EasyCases

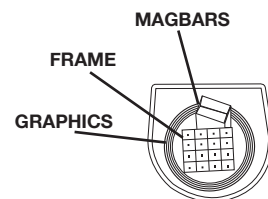

EasyDrum™
for extra panels or
small kit



**PANEL PACKING IN
EasyCase™**

Roll 1 panel only graphics
side out and place inside
case. Once inside, unroll to
touch the sides. Repeat with
more panels. Reverse
procedure to remove panels
from case. Other
components are stored in
the remaining space
available.